



1. **Golf Menu Button:** View Golf Menu
2. **MENU Button:** View Main Menu Options.
3. **UP ▲ Button:** Scrolls up through Menu items.
4. **SELECT ◀ Button:** Selects from menu items.
5. **DOWN ▼ Button:** Scrolls down through menu items. Press & hold (2 seconds) to power on/off.

\*Note: Backlight is activated with any button push. The backlight will remain lit for 10 seconds after last button push. Backlight is disabled in Play Golf Mode.

A full user manual detailing the additional features of the WR72 Alpha is available for downloading at [www.golfesn.com/user\\_manuals](http://www.golfesn.com/user_manuals)

## Care and Maintenance

The WR72 Alpha watch is durable and waterproof. To help ensure reliable operation, the following care and maintenance guidelines are recommended:

- Avoid exposing the watch to extreme environmental conditions for a prolonged period of time.
- Avoid severe impacts on the watch.
- You may clean the watch occasionally with a soft, damp cloth.
- Brush the clip contacts at the bottom of the watch regularly. Dirt build-up on the surface of the contact points may affect normal charging and data transfer.  
\*Note: Use a soft-bristled brush (included). Hard bristles or wire brushes may leave scratches on the watch.
- DO NOT expose the watch to strong chemicals such as gasoline and alcohol, as they will damage the watch.
- Store the watch in a dry place when it is not in use.

## Charging the Battery

2.

The rechargeable battery of the WR72 Alpha Watch is long lasting and provides up to 3 rounds of golf (based upon average of 4 hours per round), or two years of use as an everyday (time only) watch. However, battery life may be reduced due to a variety of factors (external temperature, etc). All rechargeable batteries lose their effective charge length over time. Charging your battery with one bar remaining (*Fig. 1*) will guarantee that you will be able to make through the entire next round.

To check your remaining battery life, press the Menu button and select Battery. To recharge the battery, align the 2 guide pins (*Fig.2*) on the included USB clip with the guide holes on the back of the watch (*Fig.3*); this will auto-align the charging pins with the receptacles. Then, connect the clip to any USB port (computer, A/C charger, etc.). Look for the scrolling battery icon to indicate that your WR72 Alpha watch is charging (make sure to connect from either the Home (Time) screen (*Fig. 4*) or from the Battery screen (*Fig 1*).



Fig. 1



Fig. 2

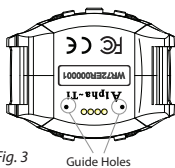


Fig. 3



Fig. 4

## Package Contents

- 1 - WR72 Alpha GPS Rangefinder Watch
- 1 - USB/Charging Cable
- 1 - Contact Cleaning Brush
- 1 - Quick Start Guide

## Computer Requirements

USB (1.1 or 2.0) Port

OS: Windows (XP/Vista/7/8), Mac OS X 10.6 or newer

### Set Time by GPS

\*To ensure reception, make sure you are outdoors away from tall buildings and trees, with a clear view of the sky.

This is the easiest way to set the time. From the Time Options Menu, select Set Time (Fig. 1), then select By GPS from the Set Time Menu (Fig. 2). The WR72 Alpha will acquire GPS signal, and upon GPS Lock, will return to the Home (Time) screen, where the time and the date will be set via your longitude position. When the selection arrow is pointing at By GPS (Fig 2.), other GPS features (Play Golf, Odometer, GPS Status) will update your time via your longitude position as well, which is convenient for the travelling golfer. \*Note: In rare instances, time zone boundaries may conflict. In these cases, it may be necessary to manually adjust the time as detailed in the Set Time Manually section.



Fig. 1



Fig. 2



### Set Time Manually

To set the time manually, select Manually from the Set Time Menu (Fig. 2). Use the **SELECT Button** ◀ (4) to cycle between fields. Use the **UP Button** ▲ (3) and **DOWN Button** ▼ (5) to cycle fields Up and Down. After the year, time and date have been set accordingly you can select **MENU Button** (2) to return to the Time Options Menu.

Golf (1)  
View Golf  
Menu

Menu (2)  
Back to Time  
Settings Menu



UP ▲ (3) Toggle active  
field UP

Select ◀ (4) Toggle  
between fields

DOWN ▼ (5)  
Toggle active  
field DOWN

To activate Play Golf Mode, select the Golf button, then select Play Golf. The WR72 Alpha will search for satellite signal, and upon acquisition will yield a list of local course results, with the nearest course at the top. Select your course to view the Front, Center, Back (FCB) screen (Fig. 1) for hole 1.

\*To ensure reception, make sure you are outdoors away from tall buildings and trees, with a clear view of the sky.



## Button Functions in Play Golf Mode (Fig.2)

**Track Shot Distance:** This feature allows you to easily check the distance between any two points and would normally be used to measure the length of your shot. Press the **SHOT button (1)** to set Point A (where you are standing) to "0". After walking to your ball (Point B), the WR72 Alpha Watch will display the distance between Point A and Point B in a straight line.

**View Golf Menu Options:** Press the **MENU button (2)** to view the Golf Menu options (Battery, New Course, or Exit Game). Press **MENU** again to return to your game.

**Manual Hole Advance:** Press **NEXT HOLE ▲ (3)** to manually advance to the next hole, or press **PREVIOUS HOLE ▼ (5)** to manually advance to the previous hole. \*Note: the WR72 Alpha does feature auto-advance; this one button advance feature is very useful for shotgun starts.

**View Hazards/Round Information:** Pressing the **SELECT Button ◀ (4)** will toggle between 1 or 2 Hazards screens, Round Info, and the FCB (Front, Center, Back) pages. Hazard and Round Info screens will automatically return to FCB after 7 seconds if no other button is pushed. See list on page 7 for a complete glossary of Hazard definitions. Round Info is a Golf Odometer that tracks total round time and distance travelled.



## Tee Time

Tee Time is a useful feature that allows you to set a tee time up to 1 week (6 days, 23 hours, 59 minutes) in advance. When a Tee Time is set, the WR72 Alpha watch will automatically enter Play Golf mode, and search for local courses 7 minutes prior to the set time. Simply select your course from the list, and enjoy your round of golf!

To set a Tee Time, select Tee Time from the Golf Menu (*Fig. 1*). From the set Tee Time screen, press the **SELECT Button** ◀ (4) to activate the Hours field. Use the **UP Button** ▲ (3) and the **DOWN Button** ▼ (5) to toggle the time up and down. Press the **SELECT Button** ◀ (4) after each field is set to toggle to the next field. After the Day field has been set, the Tee Time feature has been activated, and will show ON. A Flag Icon will also appear in the upper left-hand corner of the Home (Time) screen indicating that a Tee Time is set (*Fig. 2*).

\*Note: The Tee Time feature is a one-time setting, meaning once the Tee Time has performed it's function, it will not reactivate. To set another Tee Time, follow the steps above. If you play golf at the same time on the same day each week, you can simply select Tee Time from the Golf Menu, then press the **UP Button** ▲ (3) to turn the Tee Time ON again (pressing the **UP Button** ▲ (3) toggles Tee Time ON/OFF based upon the current Time/Day settings).

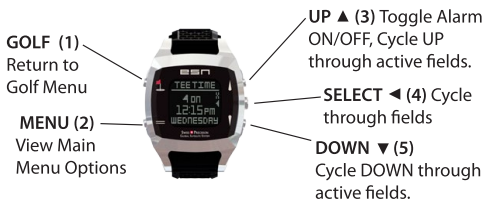


Fig. 1



Fig. 2



The Setup menu allows you to set your preferences for units of measurement in Play Golf mode (Yards or Meters), set the Auto-Off time, or view Battery life. To access the Setup Menu, select Setup from the Golf Menu. Use the **UP Button ▲ (3)** and the **DOWN Button ▼ (5)** to scroll between options. Use the **Select Button ◀ (4)** to select the desired option.



### Set Yards or Meters (Golf Preference)

Select YDS/M to set your preference for unit of measurement in Play Golf Mode. Use the **UP Button ▲ (3)** and the **DOWN Button ▼ (5)** to scroll between options (*Fig. 1*). Use the **SELECT Button ◀ (4)** to select the desired option.



Fig. 1



### Auto-Off

The Auto-Off feature is designed to automatically exit Play Golf mode when the preset time has expired. When in Play Golf mode, after the preset time has expired, an Auto-Off message will appear on the watch (*page 7, fig. 1*). Select Resume to return to the round; the Auto-Off message will appear again after 1.5 hour. Select Exit Game to immediately exit the round and return to the Home (Time) screen. If no selection is made for 10 minutes, the WR72 Alpha will automatically exit the round and return to

the Home (Time) screen, and power down the GPS module to preserve battery.

To set the Auto-Off time, select Auto-Off from the Golf Setup Menu (Fig. 2). From the set Auto-Off screen, use the **UP Button ▲ (3)** and the **DOWN Button ▼ (5)** to toggle the time up and down. Auto-Off is always set to whatever current time is showing on the set Auto-Off page. Time can be set between 1.5 and 9 hours, or select Disable to turn the feature off.



Fig. 1



Fig. 2



## iGolf Hazard Glossary

Hazards within the iGolf application are shown as abbreviations. These abbreviations are defined as follows:

1. LFB- Left Fairway Bunker
2. MFB- Middle Fairway Bunker
3. RFB- Right Fairway Bunker
4. LFW- Left Fairway Water Layup
5. LFWC- Left Fairway Water Carry
6. MFW- Middle Fairway Water Layup
7. MFWC- Middle Fairway Water Carry
8. RFW- Right Fairway Water Layup
9. RFWC- Right Fairway Water Carry
10. FGB- Front Green Bunker
11. RGB- Right Green Bunker
12. LGB- Left Green Bunker
13. BGB-Back Green Bunker
14. RGW- Right Green Water
15. FGWC- Front Green Water Carry
16. FGW- Front Green Water Layup

17. LGW- Left Green Water
18. BGW- Back Green Water
19. CRK- Creek Layup
20. CRKC- Creek Carry
21. EOF- End of Fairway



The WR72 Alpha will provide up to 4 hazard callouts per hole. Press the **SELECT ◀** Button to cycle between FCB, Hazards (up to 2 screens) & the Round Info Odometer.

The WR72 Alpha features 5 language settings (English, Deutsch, Francais, Espanol, and Italiano). By default, the user interface is in English. To change the language setting, press the **MENU Button**, then use the **UP Button** ▲ or the **DOWN Button** ▼ to scroll to “Settings.” Press the **SELECT Button** ◀ to select “Settings,” then use the **UP Button** ▲ or the **DOWN Button** ▼ to scroll to “Language” (Fig. 1) and select it using the **SELECT Button** ◀. Use the **UP Button** ▲ or the **DOWN Button** ▼ to scroll between options on the Language menu (Fig. 2), then press the **SELECT Button** ◀ to set your preferred language.



Fig. 1



Fig. 2

### WARNING

Do not attempt to open the WR72 Alpha watch.

Risk of explosion if battery is replaced with incorrect type.

- Do not attempt to open, disassemble or service the internal battery. The battery must be replaced by a qualified technician.
- Do not crush, puncture or short the battery's external contacts. Do not expose to temperatures above 140° F (60° C).
- Properly recycle or dispose of the battery. Do not dispose in fire or water.

### Legal Disclaimer

By using this product, you agree that Expresso Satellite Navigation, Inc. will not be held legally responsible for any injury or damage to you or any person or property caused by the user's improper operation and/or poor judgment while using this product.

See Warranty Section for more information regarding limitations to our liability.

### Additional Information

The Global Positioning System (GPS), a network of 32 satellites orbiting Earth, is operated and maintained by the U.S. government. This GPS device requires at least 3 satellites to be acquired to accurately determine your position. Any change made to the system by the government could affect the accuracy and performance of this product.

### Expresso.iGolf.com Website

Registering your WR72 Alpha Watch via [www.expresso.igolf.com](http://www.expresso.igolf.com) is not required, but will ensure you have access to the latest updated GPS course data.



All EXPRESSO SATELLITE NAVIGATION, INC. SYSTEMS (GPS) are navigation aids, and are not intended to replace other methods of navigation. The purchaser is advised to perform careful position charting and use good judgment. READ THE USER GUIDE CAREFULLY BEFORE USING THE PRODUCT.

The WR62 Golf GPS Watch is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, EXPRESSO SATELLITE NAVIGATION, INC. will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not apply to: (i) cosmetic damage, such as scratches, nicks, and dents. (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials or workmanship. (iii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external cause. (iv) damage caused by service performed by anyone who is not an authorized service provider of EXPRESSO SATELLITE NAVIGATION, INC.; or (v) damage to a product that has been modified or altered without the written permission of EXPRESSO SATELLITE NAVIGATION, INC. In addition, EXPRESSO SATELLITE NAVIGATION, INC. reserves the right to refuse warranty claims against products or services that are obtained and/or used in contravention of the laws of any country.

Note: Repairs have a 90 day warranty. If the unit sent in is still under its original warranty, then the new warranty is 90 days or to the end of the original one year warranty, depending upon which is longer.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. IN NO EVENT SHALL EXPRESSO SATELLITE NAVIGATION, INC. BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EXPRESSO SATELLITE NAVIGATION, INC. retains the exclusive right to repair or replace (with a new or a newly-overhauled replacement product) the product or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

Online Auction Purchases: Products purchased through online auctions or unauthorized third parties are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original authorized retailer is required. EXPRESSO SATELLITE NAVIGATION, INC. will not replace missing components from any package purchased through an online auction or unauthorized third party.

Contact EXPRESSO SATELLITE NAVIGATION, INC. Technical support to receive an RMA number.

Call or email an EXPRESSO SATELLITE NAVIGATION, INC. Technical Support Specialist to describe the problem and request a return material authorization (RMA) number. You will need to provide the unit's serial number (if applicable), your original receipt of purchase from an authorized EXPRESSO SATELLITE NAVIGATION, INC. dealer, your return shipping address, and a daytime phone number.

Phone: 1-866-691-1350 E-mail: [support@expressogps.com](mailto:support@expressogps.com)

Once you have received the RMA number, ship the unit (insured) to the following address and include the assigned RMA number and proof of purchase:

• Expresso Satellite Navigation, INC. • 824 Lincolnway, 3rd floor • La Porte, IN 46350 •

This device complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide reasonable protection against harmful interference in a residential installation, and are more stringent than “outdoor” requirements.

Operation of this device is subject to the following conditions; (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device does not contain any user-serviceable parts. Repairs should only be made by an Authorized Bushnell repair center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and will void your warranty and your authority to operate this device under Part 15 regulations.

The shielded interface cable which is provided must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.



Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Other names may be trademarks of their respective owners.



Customer Service: (866) 691-1350

[www.golfesn.com](http://www.golfesn.com)

©2014 Expresso Satellite Navigation, Inc.